 



# Wireless Touch Plate



## 1 Product Overview

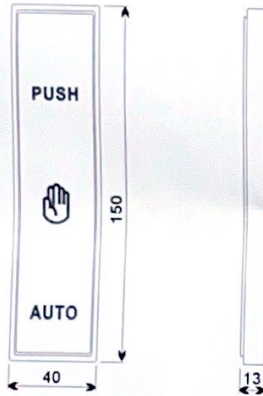

 Wireless Touch Plate

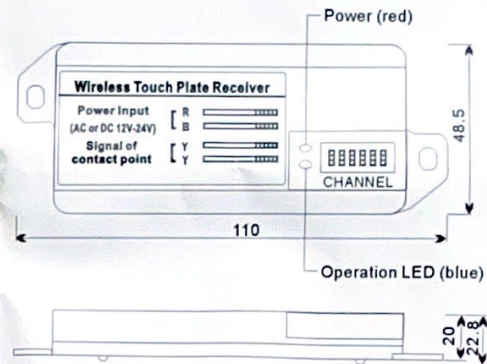


Wireless Touch Plate Receiver

## 2 Installation

### 2.1 Wireless Touch Plate

1. Unscrew and remove the cover
2. Install the two AAA batteries provided
3. Set the DIP switch to the same as receiver
4. Cover the case and fix it with screw
5. Remove the transparent film on the Touch Plate
6. Attach the Touch Plate with double-sided tape provided to the desired position

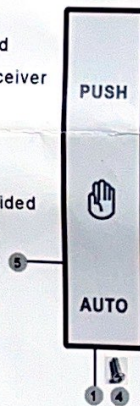

### 3 Operation

- Red LED will light up when power is connected while blue LED will flash twice
- Blue LED will light up when Touch Plate is pressed and off when it is released
- When the Touch Plate is pressed for 5 seconds, the automatic door open signal is on continuously. Press the Touch Plate again to release it

### 4 Technical Data

Transmitter	
Weight	47g
Dimensions	150mm x 40mm x 13mm
Supply Voltage	3V
Frequency	2.4GHz
Temperature	-20° C to 60° C

Receiver	
Weight	41g
Dimensions	48.5mm x 110mm x 22.8mm
Supply Voltage	AC/DC 12V ~ 24V
Receive Sensitivity	-100dBm

### 2.2 Wireless Touch Plate Receiver

1. Set the DIP switch to the same as the Wireless Touch Plate
2. Attach the Receiver to the desired position with the 2 screws provided
3. Plug in the 4-core cable provided and connect according to the wiring diagram

